


Save Packaging and shipping of an EMS-Sprayer

Please send us an EMS-Sprayer **only** in the original packaging and take the following steps into account:

1. Dismantle the spiral hose with the spray gun on the EMS-Sprayer. (Pic 1).
2. Remove the filter from the tank!
3. Empty the water completely by turning the EMS sprayer in a suitable place (shower or outdoors).
4. Turn the EMS sprayer upside down and open (unscrew; Pic 2) the transparent hose connection between the tank and the heating pipe so that the remaining water runs out of the heating pipe; Be sure to **reassemble the hose connection** once the water has drained completely. Then turn the EMS sprayer over again.
5. Mount the supplied blind plug at the mounting position of the spiral hose to close the heating pipe for transport so that no residual water can escape during transport. Escaping residual water softens the packaging and increases the risk of transport damage for which no liability can be accepted!
6. Dry the EMS sprayer (inside and outside) by rubbing it out with a soft towel! Please don't forget the lower part of the tank and rub it completely dry! To do this, twist a towel or dry mop through the filter opening and rub out.
7. If necessary, send the spray gun for checking and place it well padded in the upper tank part of the EMS sprayer! The two round foam parts (discs) that can be positioned below and above the spray gun in the upper part of the tank are suitable for padding the spray gun.
8. Careful packaging in the original box with the foam bodies. To do this, place the EMS sprayer in the circular indentation of a large foam body and align the heater diagonally to the foam body. Then press the foam ring with the large recess into the gap between the column and the foam body (Pic 4). Now place the second large foam body with the circular indentation on the EMS sprayer from above and align it with the lower foam body. Press the foam ring with the small recess into the gap between the column and the foam body from below (Pic 5).
9. Wind up the power cable and stow it away.
10. Place the EMS sprayer with the positioned foam bodies in the packaging box (Pic 6).

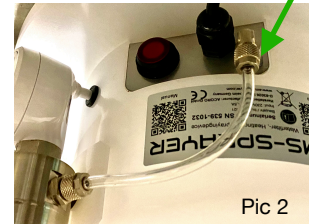

11. Seal the box well on all sides with wide, suitable packaging tape!
12. Make an appointment with us for collection by DPD

If you have any questions, please contact us: info@ems-sprayer.com